



PBC Fastener Location At Panel Ends

When Used As A Roof Panel, The PBC Panel Must Be Lapped Two Corrugations (2'-8" Panel Coverage Will Be Less)

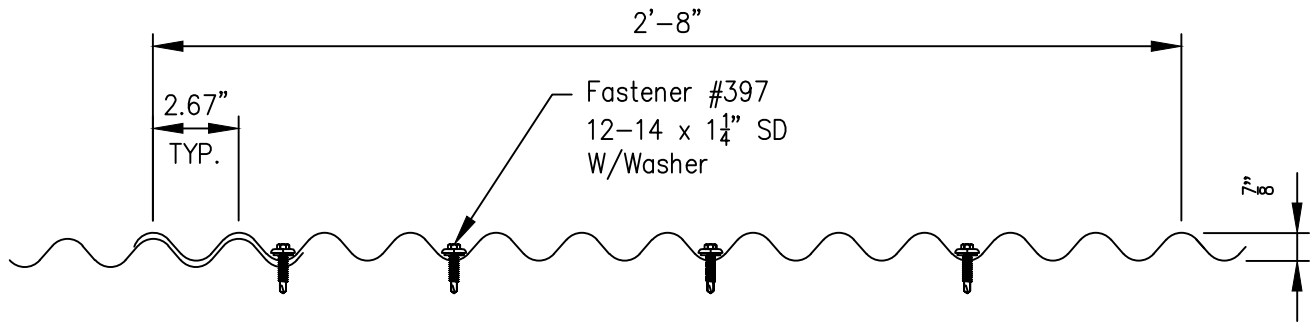

PBC Fastener Location At Intermediate Supports

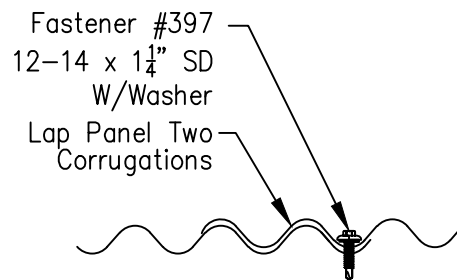

PBC Panel Sidelap

Note That 32" Panel Coverage Will Be Lessened